

	Solid Color	Flashing Colors	Wireless LED
Black	This means there is no power to the Genie 2		The built-in bridge isn't functioning. This could be normal if you have no wireless clients.
White	This means that there's new software available. Pressing and holding the Add Client button will force the software. Basically, don't do this. You're better off letting it update on its own schedule. If you see solid white, it should turn to flashing green in about a minute or less.	New software is downloading right now. Leave it alone and come back in half an hour and everything will be fine.	
Blue	This is something you should never see unless you are installing for the first time. It means the system has no clients assigned to it and it's ready.		
Yellow	Something has gone wrong. Usually this means the Genie 2 is disconnected from the dish. Check all the cable paths.	Something bad happened during a software download. This is rare and if you see this, try rebooting and tracing the cables to make sure they're all connected.	Flashing: Something's wrong with the wireless video bridge. Don't hide the Genie 2 behind something or in a cabinet.
Green	This is the normal state of the Genie 2 when it's running.	Your Genie 2 is booting up. This is normal after a power failure or software update.	Everything is fine. This is the normal state.
Red	Something is very bad inside your Genie 2. Reboot it and if it doesn't fix itself in half an hour, replace it.	Your Genie 2 is trying to repair itself. Leave it alone and come back in half an hour. If things aren't fine, you'll probably want to call for a replacement.	